


12" Balustrade System Baluster - Woodruff (WF)

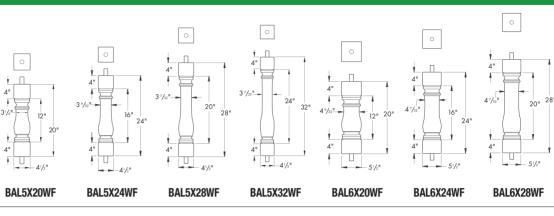




7 1/8"

8 ³/16"

8 ¹/8"

8 ¹/8"

Maximum Center-to-Center Distance To Meet 4" Rule (See Page 2 BL For Details)

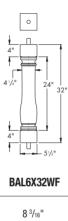


7 ³/16"

7 ¹/8"

7 ¹/8"

Part Numbe Maximum Ce

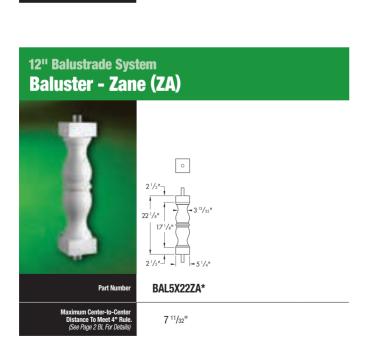

*Cannot be used for stair applications.

12" Balustrade System Top Rail



– Length –

Part Number	Length	(See Installation Guide Page 38)
BTR12X96	96"	BRK12
BTR12X120	120"	BRK12
BTR12X144	144"	BRK12

*Connects both ends of one 12" Rail to applications. (4 qty.) Bear Claw Brackets. (16 qty.) #12 x ³/₄" Pan Head Screws. (4 qty.) ⁵/₁₆" - 18 x 5" Hex Head Cap Screws. (2 qty.) ¹/₄" - 20 x 2" Flat Head Phillips Thread Cutting Screws. (4 qty.) ⁵/₁₆" Clip Nuts.

$(4 \text{ qty.}) 1^{1/2}$ " 0.D. x 5/16" l.D. x 3/64" thick Fender Washers.

12" Balustrade System Bottom Rail

	Part Number	Length	Baluster Rail Installation Kit* (See Installation Guide Page 38)	Rail Support Block (See Below)
	BBR12X96	96"	BRK12	RSB4X4X6
$\xrightarrow{F} P^{*} \xrightarrow{P^{*}}$	BBR12X120	120"	BRK12	RSB4X4X6
	BBR12X144	144"	BRK12	RSB4X4X6

*Connects both ends of one 12" Rail to applications. (4 qty.) Bear Claw Brackets. (16 qty.) #12 x 3/4" Pan Head Screws. (4 qty.) 5/6" - 18 x 5" Hex Head Cap Screws. (2 qty.) 1/4" - 20 x 2" Flat Head Phillips Thread Cutting Screws. (4 qty.) 7/6" Clip Nuts. (4 qty.) 11/2" O.D. x 5/16" I.D. x 3/64" thick Fender Washers.

12" Balustrade System Rail Support Block



5 1/4" L

<u>= = =</u> — Length




RSB4X4X6

Part Number

Rail Support Blocks should be placed under the Bottom Rail at a span of every 48" or less. These blocks can be trimmed for height.

12" Balustrade System **Baluster Top Rail Radius**

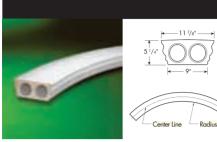

			Fy	PON	BALUSTRADES AND COLUMNS
					STRAL
Part Number	Radius	Center Line Length	Baluster Rail Installation Kit* (See Installation Guide Page 38)		
BTRR12X48	48"	75" (1/4 Circle)	BRK12		SA
BTRR12X60	60"	94" (1/4 Circle)	BRK12		
BTRR12X77	76 ¹ /2"	122" (1/4 Circle)	BRK12		C
BTRR12X96	96"	120" (1/5 Circle)	BRK12		
BTRR12X110	110"	78" (¹ /8 Circle)	BRK12		M
BTRR12X126	126"	102" (1/8 Circle)	BRK12		SN
BTRR12X169	168 ¹ /2"	117 1/2" (1/9 Circle)	BRK12		
BTRR12X192	192 1/2"	100" (1/12 Circle)	BRK12		
BTRR12X247	246 ¹⁵ / ₁₆ "	98" (1/16 Circle)	BRK12		

*BRK12 kit includes hardware to mount top and bottom rail to a baluster and is purchased separately: (4 qty.) Bear Claw Brackets. (4 qty.) 5/16"-18 Clip Nuts.

(16 gty.) #12 x 3/4" Pan Head Screws.

(4 qty).⁵/₁/₆"-18 x 5" Hex Head Cap Screws. (4 qty).⁵/₁6" x 1 ¹/₂" Fender Washers. (4 qty).¹/₄" x 20 x 2" Flat Head Self Tapping Screws.

12" Balustrade System **Baluster Bottom Rail Radius**

- Center Line

- Radius



Part Number	Radius	Center Line Length	Baluster Rail Installation Kit* (See Installation Guide Page 38)	Rail Support Block (Page 32 BL)
BBRR12X48	48"	75" (1/4 Circle)	BRK12	RSB4X4X6
BBRR12X60	60"	94" (1/4 Circle)	BRK12	RSB4X4X6
BBRR12X77	76 ¹ /2"	122" (¹ /4 Circle)	BRK12	RSB4X4X6
BBRR12X96	96"	120" (1/5 Circle)	BRK12	RSB4X4X6
BBRR12X110	110"	78" (1/8 Circle)	BRK12	RSB4X4X6
BBRR12X126	126"	102" (¹ /8 Circle)	BRK12	RSB4X4X6
BBRR12X169	168 ¹ /2"	117 1/2" (1/9 Circle)	BRK12	RSB4X4X6
BBRR12X192	192 ¹ /2"	100" (1/12 Circle)	BRK12	RSB4X4X6
BBRR12X247	246 ¹⁵ / ₁₆ "	98" (1/16 Circle)	BRK12	RSB4X4X6

*BRK12 kit includes hardware to mount top and bottom rail to a baluster and is purchased separately: (4 qty.) Bear Claw Brackets. $(4 \text{ qty.})^{5/16}$ "-18 Clip Nuts.

(16 qty.) #12 x 3/4" Pan Head Screws.

38 BL





- (2 qty.) 3/8"-USS Flat Washers.
- (2 qty.) Corner Brackets.
- (2 qty.) 3/8"-16 x 39" Threaded Rods. (8 qty.) #10 x 3/8" Flat Head Self Tapping Screws.
- (1 qty.) Steel Base Plate.

*NPK13 kit includes hardware to secure one Newel Post and is purchased separately:

- (1 qty.) Steel Base Plate.
- (1 qty.) Channel Bracket.

- (1 qty.) ¹/₂" 13 Hex Nut. (1 qty.) ¹/₂" Lock Washer. (1 qty.) 13" x 72" Threaded Rod.

12" Balustrade System **Newel Post Accessories**

	Part Number	Coordinating Newel Post Accessories	
$13\frac{1}{12^{n}}$ $Top View$ $4\frac{1}{10\frac{1}{10^{n}}}$ $2^{\frac{1}{2}n^{n}}$	PST11X11FP Post Top - Fancy Peak	_	
$117/a^{n}$ $Top View$ $15/a^{n} \leftarrow 10/2^{n} \rightarrow 1$	PST12X12F Post Top - Flat	_	

CHART CONTINUED ON FOLLOWING PAGE.

12" Balustrade System Newel Post Accessories (continued)

				F	PO	N.	RΛΠ
12" Balustrade Newel Post	system Accessories (con	tinued) Part Number	Coordinating Newel Post Accessories				STRAD
	$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	PST13X13F Post Top - Flat	B10X13				ES AND C
	$ \begin{array}{c c} \hline & & \\ 15 & & \\ & & \\ \hline \\ & & \\ \hline \\ \hline$	PST13X13FP Post Top - Fancy Peak	_		PO		SNWILTU
	$ \begin{array}{c} 2^{11}/16^{11} \\ & \checkmark \\ 3^{1}/8^{11} \\ \hline & 14^{11} \\ \hline & 2^{11} \end{array} $	PST14X14F Post Top - Flat	B10X13				
	$\frac{\underbrace{4}_{11/2^n}}{\underbrace{4}_{11/2^n}} \underbrace{6^{1/4^n}}_{12^{1/2^n}} \underbrace{4}_{1/2^n}$	PST13X13P Post Top - Peaked	_			-	
	$\begin{array}{c} & & & & \\ \hline \\ \hline$	PST14X14P Post Top - Peaked	_			-	
	13 $\frac{1}{\sqrt{2}}$ Top View $3\frac{\sqrt{2}}{\sqrt{2}}$ $\frac{1}{\sqrt{2}}$ $\frac{1}{\sqrt{2}}$	PST14X14X3P Post Top - Peaked	_				
Ζ	$ \begin{array}{c c} \hline 10^{''} & \hline \\ \hline \\$	PST16X16P Post Top - Peaked	_				
2	10"→ 12 7/8" 8 3/8"→	B10X13 Ball	PST13X13F PST14X14F				



TIMELESS BEAUTY.

Fypon[®] Columns provide the perfect combination of classic beauty and unsurpassed strength. Constructed of a durable high-density urethane, our Columns are designed to be beautiful as well as strong—with load-bearing capacities. The low-maintenance urethane used to produce Fypon Columns is resistant to moisture and insect infestation. They can be used in interior and exterior applications and are the perfect solution for high-humidity environments. For additional peace of mind, Fypon Columns are covered by a Lifetime Limited Warranty. For installation instructions, refer to the back of the comprehensive, full-line product catalog or visit www.fypon.com.



Flat Square Serpentine Column





S S COLUMNS

HOW TO ORDER COLUMNS.

- 1. Determine the desired Column style. (See Column Styles at right)
- 2. Determine the required height. Columns can be trimmed for height if your exact size is not available.
- 3. Determine the load bearing capacity (if required).
- 4. Determine the bottom shaft diameter or width.
- 5. Find the chart of the style you selected in step 1. Based on the desired height, load-bearing capacity, and/or bottom diameter determined in steps 2 – 4, find the part number in the chart.
- 7. Find the part number for the cap and base set that matches the Column size of the Column you have chosen.
- 8. Select any installation kits needed.

SAMPLE CHART

Fluted Square Column

Part Number Shaft Height Cap Width Base Width **Plinth Height** Load Rating/Dead Load \bigcirc **COL8X96FSQ** 96" 8" 8" 11 ³/4" 6" X 6" COL11X96FSQ 8" X 8" 96" 10 ¹/2" 10 ¹/2" 12 ³/4" COL11X108FSQ 108" 10¹/2" 10¹/2" 13 ³/4" 8" X 8" Height

As shown in the examples below, all part numbers are alphanumeric-the "alpha" is product descriptive and the "numeric" relates to size.

Width L




COLUMN STYLES

12000#

12000#


12000#

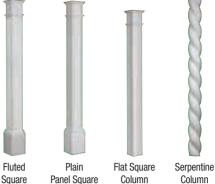





Fluted Square Column

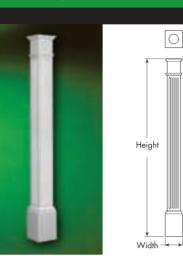

	Part Number	Shaft	Height	Cap Width	Base Width	Plinth Height	Load Rating/Dead Load
	COL8X96FSQ	6" X 6"	96"	8"	8"	11 ³ /4"	12000#
Ţ	COL11X96FSQ	8" X 8"	96"	10 ¹ /2"	10 ¹ /2"	12 ³ /4"	12000#
	COL11X108FSQ	8" X 8"	108"	10 ¹ /2"	10 ¹ /2"	13 ³ /4"	12000#

Plain Panel Square Column



	0
1	T
Height	
¥	
Width -	 ∢→

 \bigcirc

Part Number	Shaft	Height	Cap Width	Base Width	Plinth Height	Load Rating/Dead Load
COL8X96PSQ	6 ¹ /8" X 6 ¹ /8"	96"	8"	8"	15 ⁷ / ₁₆ "	12000#
COL11X96PSQ	8" X 8"	96"	10 ¹ /2"	10 ¹ /2"	13 ³ /4"	12000#
COL11X108PSQ	8" X 8"	108"	10 ¹ /2"	10 ¹ /2"	13 ³/4"	12000#




Flat Square Column - With Top Plinth - No Base

						ł	Y	PON
Square Colu	ımn – With To	op Plinth – No						
1	0	Part Number COL8X96FBTSQ	Shaft 6" X 6"	Height 96"	Cap Width	Base Width	Plinth Height	Load Rating/Dead Load
	Height Width							

Square Column Base

		Part Number	Opening Width	Opening Depth	Matches			
		CBS6	6"	6"	COL8X96FBTSQ			
	Opening Depth	CBS8	8"	8"	COL8X96FSQ			
	→ Opening ← Width	CBS11	10 ¹ /2"	10 ¹ /2"	COL11X96FSQ, COL11X108FSQ, COL11X108PSQ			
			I	I				

Serpentine Column

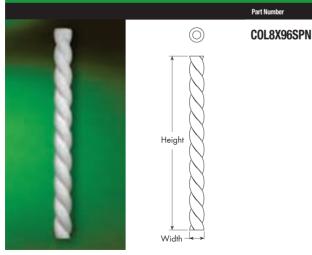

	Part Number	Shaft Diameter	Height	Cap Match	Base Match	Load Rating/Dead Load
\bigcirc	COL8X96SPN	8"	96"	CC8SPN	CB8SPN	12000#

FYPON

Deco Cap				
	Part Number	Opening Width	Opening Depth	Matches
T	CC8SPN	4 ¹ /2"	11 ¹ /2"	COL8X96SPN

Deco Base



Part Number	Opening Widt	th Opening Depth	Matches
CB8SPN	4 ¹ /2"	7 1/2"	COL8X96SPN
7 ¹¹ / ₁₆ ¹¹ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓ ↓	Ι	I	I

Lamp Post



	Part Number	Height	Тор	Bottom
	LP5X96	96"	4 ¹ /2"	5"
0				
Height Width >				



					ł	YPON.
Lamp Post						STR
		Part Number	Height	Тор	Bottom	A
	O Height Width→ ←	LP6X96	96"	3 1/2"	5 1/2"	YPON

