

Dating back to the Georgian period of the 1700's, the introduction of panel moulding has provided elegant interior accents. From walls, to ceilings, to doors, Century panel mouldings visually enhance a room's sense of space by adding alluring and exquisite decoration.

The use of framing corners compliments this classic style with a finishing touch that brings elegance and ambience to any décor. Each panel moulding has complementary crown and cornice mouldings, bringing a harmonizing design to all living spaces.




A



Classic I - CR 3392
1-9/16" H + 3/4" P + 6' 6" L



D

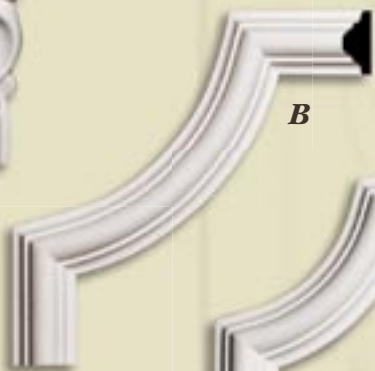

B



C

A Classic Corner III - PM 10177
7-1/2" H + 7-1/2" W + 3/4" D

B Classic Corner I - PM 10277
8-1/6" H + 8-1/6" W + 5/8" D

C Classic Corner II - PM 10366
5-3/4" H + 5-3/4" W + 11/16" D

D Classic Insert - PM 10400
4-1/8" H + 11-11/16" W + 3/4" D




Drayton - CR 3402
1-3/4" H + 5/8" P + 6' 6" L



E

E Drayton Corner - PM 10000
6-1/8" H + 6-1/8" W + 3/4" D

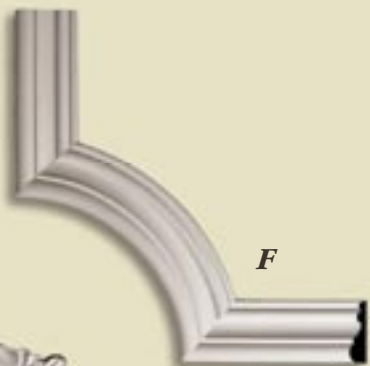

F

F Astor Corner I - PM 10378
11-5/8" H + 11-5/8" W + 5/8" D



G

G Astor Corner II - PM 10377
11-3/8" H + 11-3/8" W + 1-1/4" D




Astor - CR 3350
2-3/16" H + 1/2" P + 8' L



Cumberland - CR 3502
1-3/4" H + 5/8" P + 8' L

H Cumberland Corner II
PM 10578
13-3/8" H + 13-3/8" W + 1-1/16" D

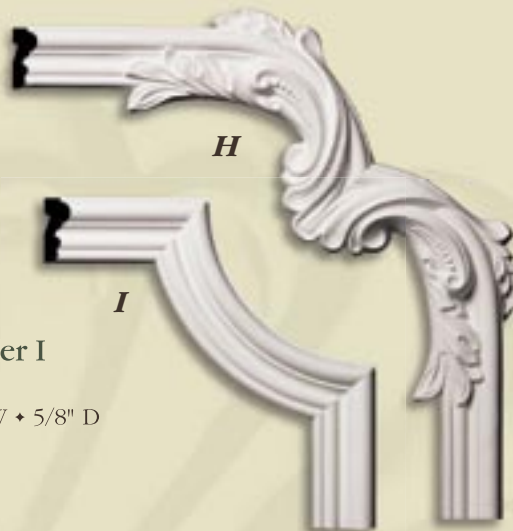

I Cumberland Corner I
PM 10577
8-15/16" H + 8-15/16" W + 5/8" D




Crown moulding: Patriot Crown MC 1202.
Panel moulding: Fredrick CR 3322.
Framing corner: Fredrick I PM 10599.
Pilaster: Four Fluted Pilaster PL 100.



Crown moulding: Fairhaven MC 1362.
Panel moulding: Waterman CR 3163.
Framing corner: Waterman Corner PM 10700.
Pilaster: Four Fluted Pilaster PL 100.



Crown moulding: Preston MC 1341.
Panel moulding: Classic CR 3392.
Framing corner: Classic III PM 10177.
Pilaster: Four Fluted Pilaster PL 100.

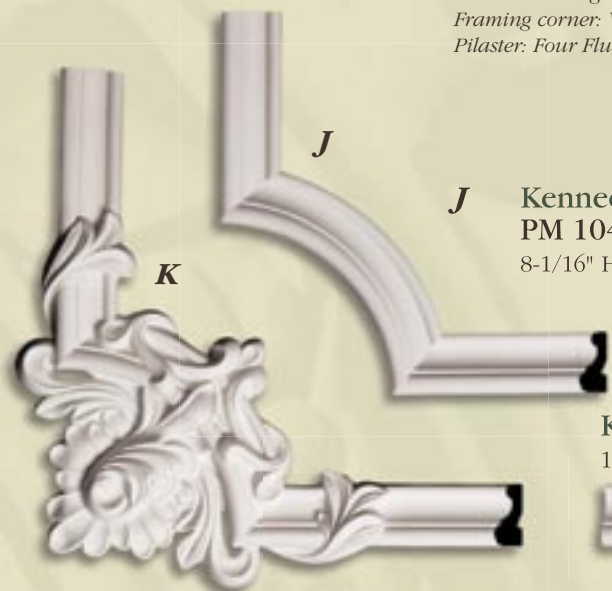


J Kennedy Corner I
PM 10478
8-1/16" H + 8-1/16" W + 5/8" D

K Kennedy Corner II
PM 10477
10" H + 10" W + 1" D


Kennedy - CR 3391
1-7/16" H + 5/8" P + 8' L

H = height + P = projection + W = width + D = depth + L = length + R = repeat
See page 48 for complete measurement descriptions.

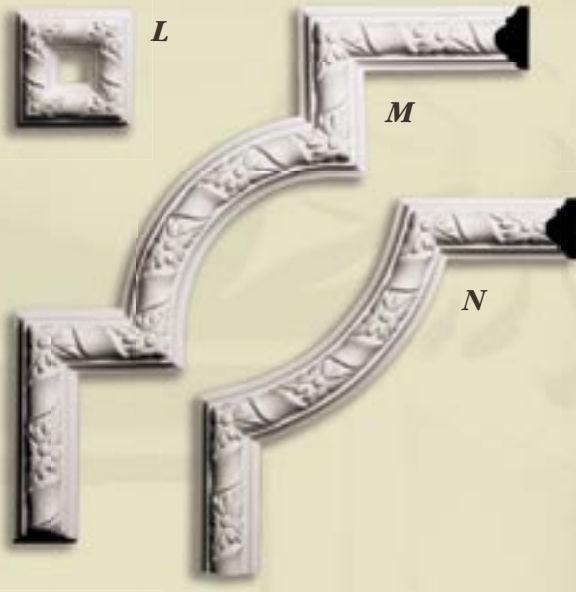


Tifton - CR 3120
1-5/8" H + 1" P + 8' L + 2-1/4" R

- L** Tifton Corner Block - PM 22100
4" H + 4" W + 15/16" D
- M** Tifton Corner II - PM 10801
11-1/2" H + 11-1/2" W + 1" D
- N** Tifton Corner I - PM 10800
9-1/16" H + 9-1/16" W + 15/16" D
- O** Tifton Corner III - PM 22000
14" H + 14" W + 15/16" D

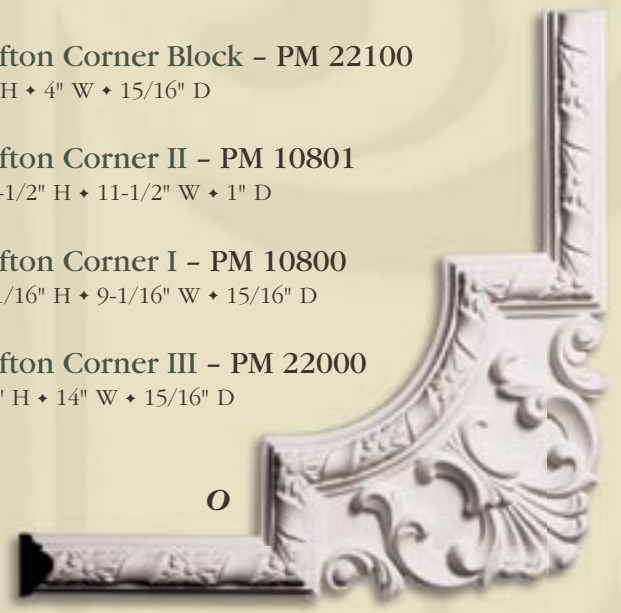

T Waterman Corner - PM 10700
12-1/2" H + 14-7/8" W + 1" D

Waterman - CR 3163
2" H + 1" P + 8' L + 7-1/4" R



Galena - CR 3302
2" H + 3/4" P + 6' 6" L + 2-1/4" R




P Galena Corner - PM 10810
9-7/8" H + 9-7/8" W + 7/16" D



Q Dundee Corner - PM 21000
25-7/16" H + 25-7/16" W + 1-3/8" D

Dundee - CR 3183
2-3/16" H + 3/4" P + 8' L + 1" R





Hyatt - CR 3193
3-1/16" H + 5/8" P + 8" L + 1-3/4" R

R Hyatt Corner II - PM 10715
15-1/8" H + 15-1/8" W + 1-1/2" D

S Hyatt Corner I - PM 10716
18" H + 18" W + 7/16" D



R



S




Panel moulding: Dundee CR 3183 with Dundee Corner PM 21000. Ceiling medallion: Marseilles CM 3031.
Crown moulding: Florence Cove (large) MC 2022 Lg, Chastain Cove (large) MC 2041 Lg.




Elizabeth CR 3312
1-13/16" H
3/4" P
6' 6" L
3-1/2" R

34

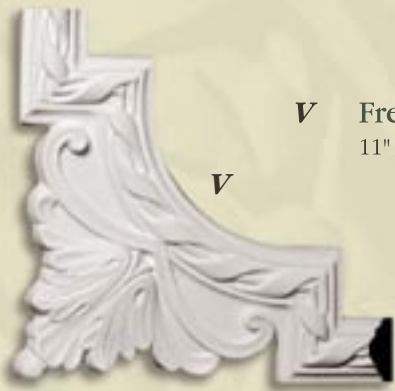

V Fredrick Corner - PM 10599
11" H + 11" W + 5/8" D


V

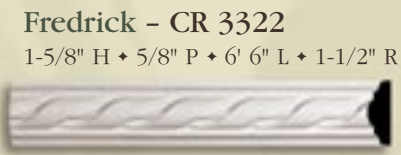

Fredrick - CR 3322
1-5/8" H + 5/8" P + 6' 6" L + 1-1/2" R

U Elizabeth Corner I PM 10300
9-1/2" H
9-1/2" W
1" D

U

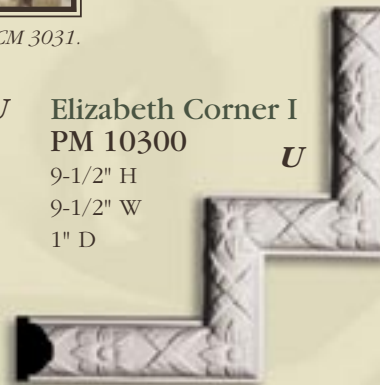

H = height + P = projection + W = width + D = depth + L = length + R = repeat
See page 48 for complete measurement descriptions.