

Panel Mouldings

8 Ft. Lengths




Measurements are approximate




PX103

PX103A


A = 7-1/2", B = 1-3/8", C = 1/2"

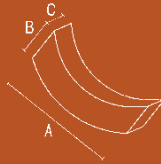

PX116

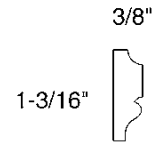


PX117

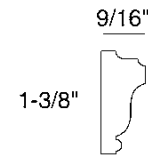

PX120

PX120A

A = 7-1/2", B = 2-1/4", C = 3/4"

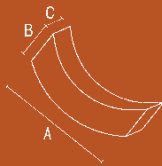


PX103

PX120



SX104




PX130

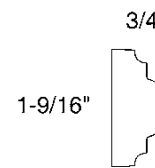

PX131

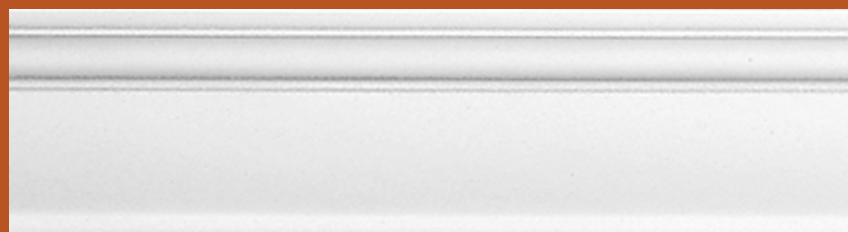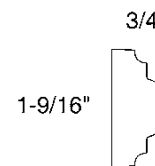

PX113

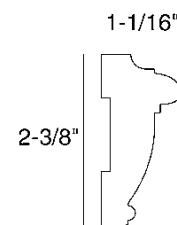


When mounting, if not nailing, it is recommended to use Orac DecoFix Pro. You must use Orac DecoFix Pro for all joints (see page 29).


Panel Mouldings

8 Ft. Lengths

Measurements are approximate

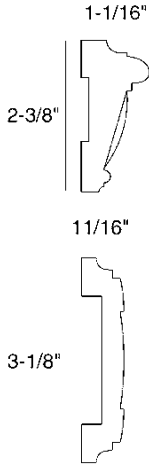

PX114

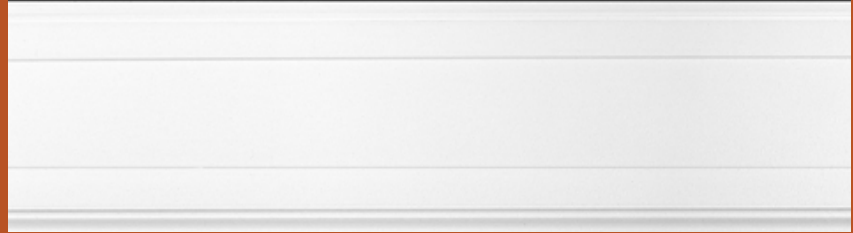


PX102


Mini Mouldings

8 Ft. Lengths

Measurements are approximate

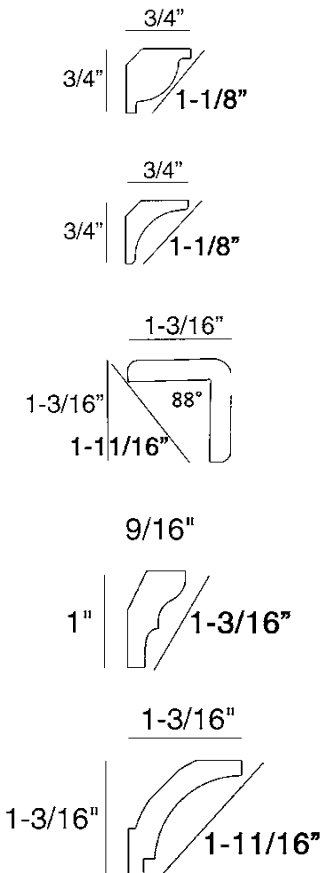


CX132




CX133



CX134



CX111

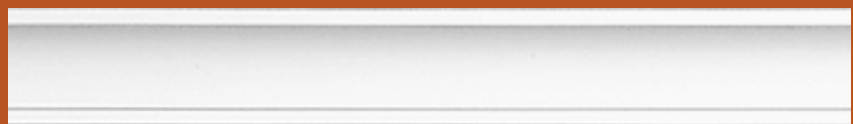

CX115

